

POC Radio

High-fidelity sound quality, large-capacity battery, single call, group call, LCD color high-definition screen



PRECAUTIONS

1. Refer service to qualified technicians only.
2. Do not disassemble or modify the transceiver for any reason.
3. Do not expose the transceiver under direct sunlight long time or to extremely hot condition.
4. Do not place the transceiver on the unstable surface.
5. Keep the transceiver out of dust, moisture, and water.
6. Do not operate the transceiver or charge the battery pack under explosive conditions.

01

Main functional features

- National intercom unlimited distance
- Manually switch fixed network
- Super volume, high fidelity sound output
- GPS positioning (optional)
- Low power voice prompt function
- PTT voice right application / preemption
- Group call / single call / friend
- Air upgrade / manual upgrade

02

Operating instructions

PTT key

A: In stand by mode (green light flashes slowly), press PTT key to initiate a call (red light is on).

B: During the call, when voice is received (green light is on), install PTT key to apply for voice right(the red light is on), release the PTT key to release the voice right and return to the idle state (the green light flashes slowly).

Display operation

Operate according to the machine display function, group, single call, temporary call, setting menu and other functions.

Using Headphones

Please use the special earphone for this machine. Press the PTT button on the headset to initiate a call. Release the PTT button to release the call right.

03

Indicator description

Host status	Indicator Status	Time
Startup status Setting status Network finding status	The green light is on	
Host status	Green light flash	0.5sbright, 0.5sLight off
Waiting state	Green light flash	0.5sbright, 3.5sLight off
Initiate call status	The red light is on	
Answer voice status	The green light is on	
Shut down operation	The red light is on	5s
Low voltage	The red light flashes slowly	

04

Basic operation

Install UIM card

Before using the machine, insert a valid UIM card (user identification card) into the machine.

Power on

In the off state, turn the volume knob clockwise or press the key to start up, and it will start up. After successful startup, the green light is always on and then flashes. After successful login to the network, the terminal Broadcast a welcome message.

Adjust volume

Rotate the volume potentiometer to reach the appropriate volume, or use the side key to adjust the up and down keys.

Select group (group call)

In standby mode, operate the display screen to enter the group list, and select the corresponding, Press PTT to confirm entering.

Member selection

Directly enter the member list, select the corresponding member, and press PTT, Press the key to enter the single call status.

05

Fault handling

Troubleshooting guide

If the following phenomena occur during the use of your walkie talkie, please check the following information first. If they can not be eliminated, please contact the dealer.

Poor signal reception

The possible reason is that the network signal in your current location is relatively weak (such as the basement or near the building), which makes the radio wave unable to be transmitted effectively or the network is busy (for example, the network traffic is high during peak hours, which makes it impossible to talk).Solution a please move to a location where the network can be well received. B please avoid using it in similar periods, or please try again later.

Echo or noise

Possible cause: The trunk lines of some network carriers are faulty. After the shutdown is restarted, the system automatically searches for the base station and switches to the network with better quality.

Shortened standby time

Possible cause: The standby time of the same walkie-talkie is different from that of the network carrier's system Settings Network operators have different systems with different standby times or battery exhaustion. In high temperature or cold environment, the battery life will be shortened. In addition, if you can not connect to the network, the intercom will continue to send signals to search the base station. If you are in a weak area, please temporarily turn off the intercom.

Unable to connect to the network

Possible cause: The traffic in the UIM card is exhausted. The signal is poor or you are not on the network server The solution is to switch to a valid UIM card and move to a more open location and try again if you are in a building Please move to the window and try again.

06

warranty card

Model: _____ Serial NO.: _____

Dealer: _____ User name: _____

Address: _____ Purchase Date: _____

Tel NO.: _____ Fax NO.: _____

Zip Code: _____

Warranty Remarks:

1. The consumer keeps the warranty card as the proof for repairing.
2. The card is of validity with the stamp and date.
3. The card must not be altered. Please confirm that the card NO. and the machine NO. must be same, or else it is not valid.
4. The accessories, such as charger, battery, earphone, antenna, and program cable are not covered. The dealer will repair or replace any defective parts during one year limited warranty period.
5. The consumer can send the machine to the purchase site or our maintenance sites for repairing.